


ROCOM

- D** Doortello Business externe Relaiseinheit DB RU
- GB** Doortello Business remote relais unit DB RU
- I** Doortello Business unità rele esterna DB RU

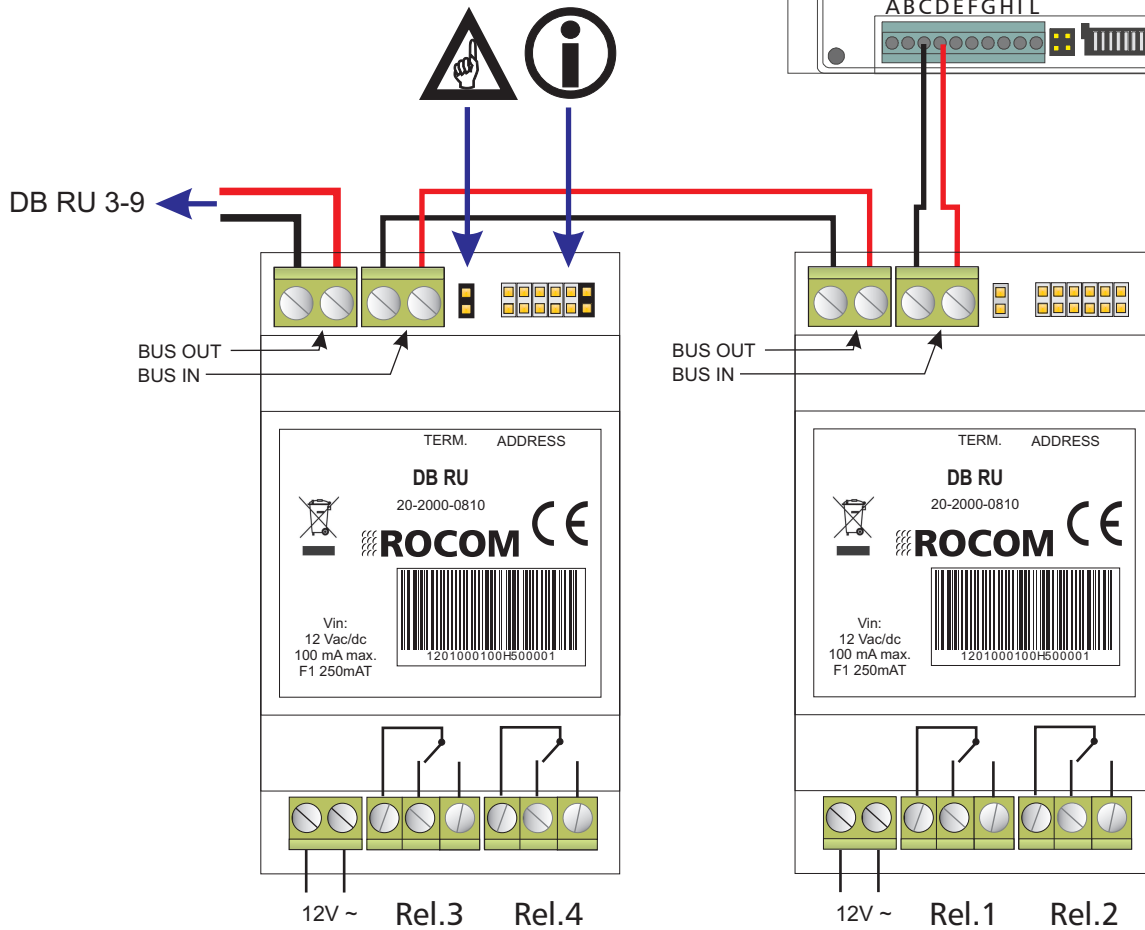

ADDRESS



Brückenstecker Term. nur auf der letzten DB RU Einheit im Bus einsetzen.
 Insert jumper Term. only on the last DB RU unit in the bus.
 Inserire il ponticello Term. solo sul l'ultima unità DB RU nel bus.