






ROCOM

- D** Doormaster 4 Kurzbedienungsanleitung
- GB** Doormaster 4 quick guide
- I** Doormaster 4 guida rapida

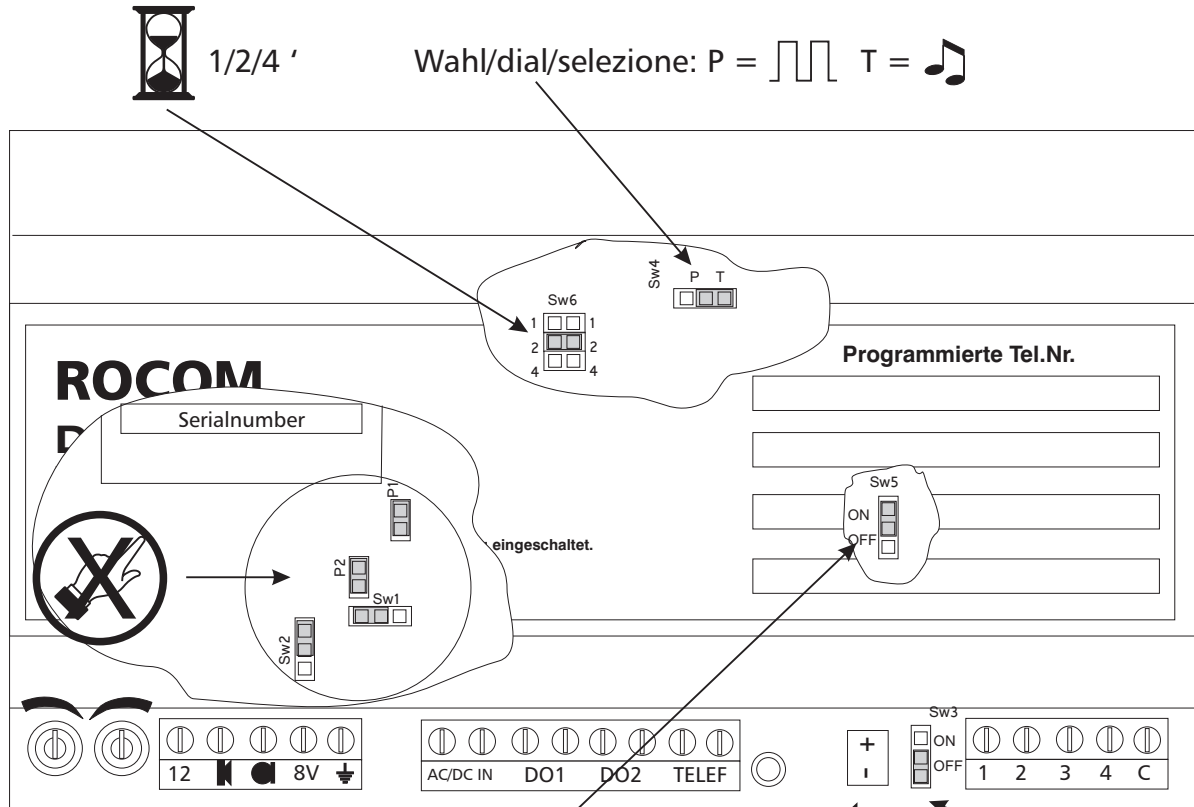


Anrufbeantwortung/autoanswer/
riposta automatica: ON/OFF

Programmierung/programming/
programmazione: ON/OFF
+ - Optional

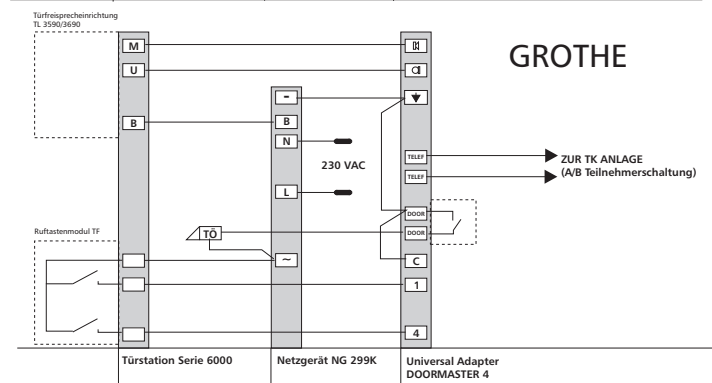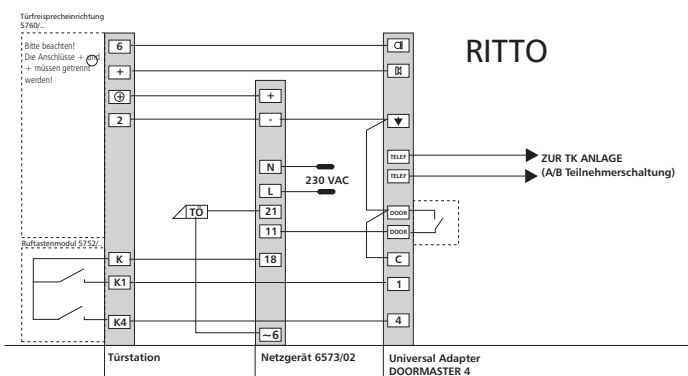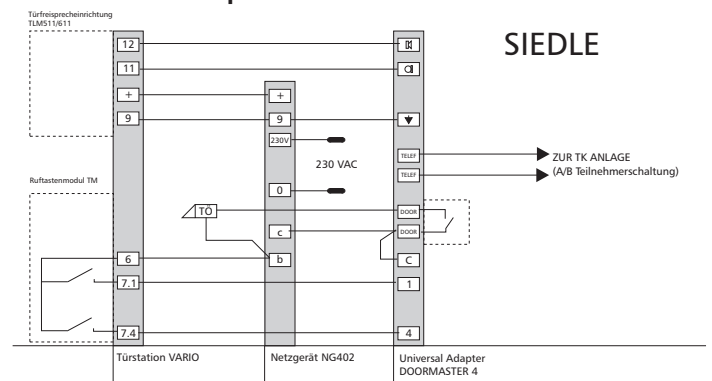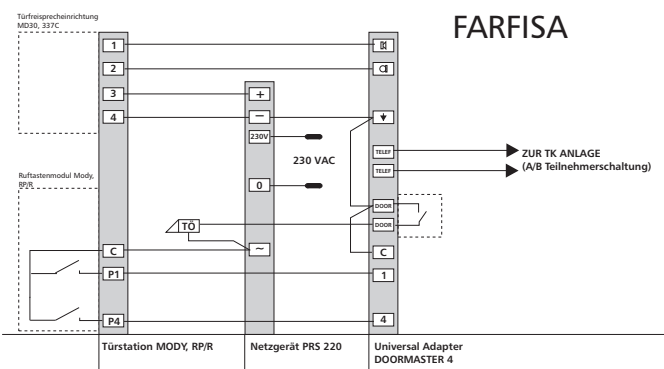


- D** Doormaster 4 Programmierung
- GB** Doormaster 4 programming
- I** Doormaster 4 programmazione


Programmierung der Rufnummern/telephon no. programming/programmazione nr. di telefono

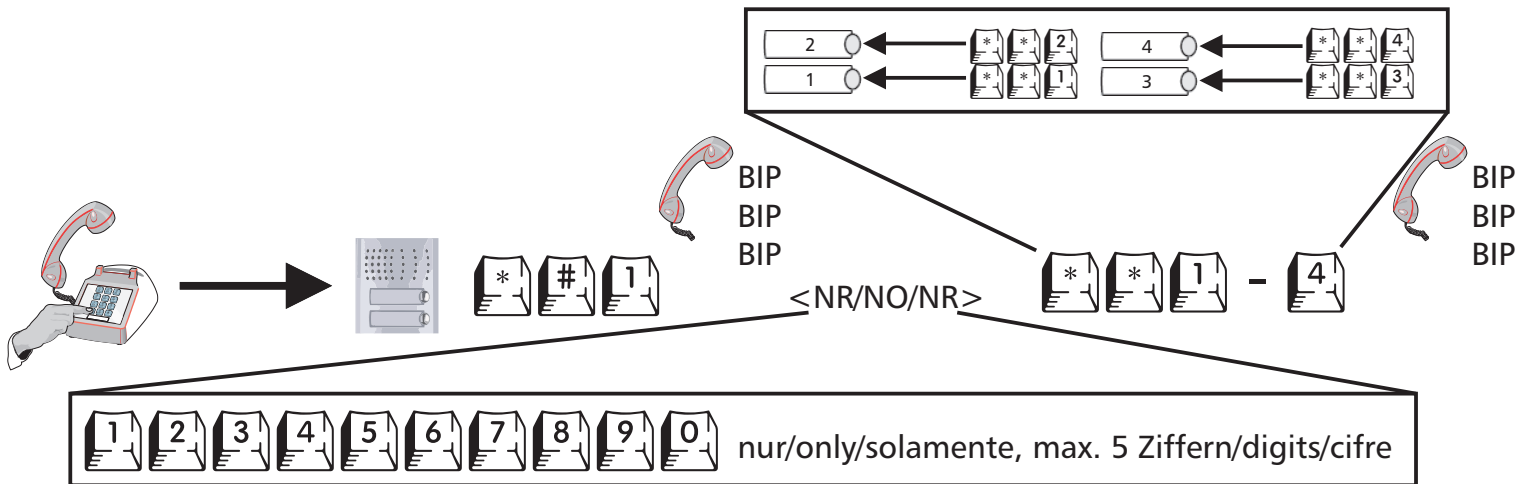


Telefonnummer löschen/delete a telephone no./cancellazione nr. telefonico

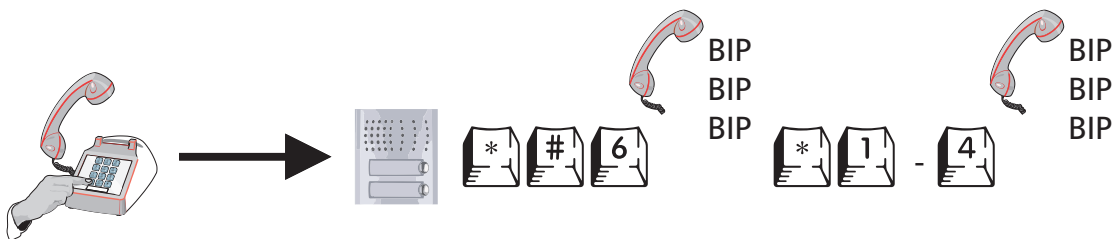

Aktivierungszeit Kontakte/contacts activation timer/tempo attivazione contatti

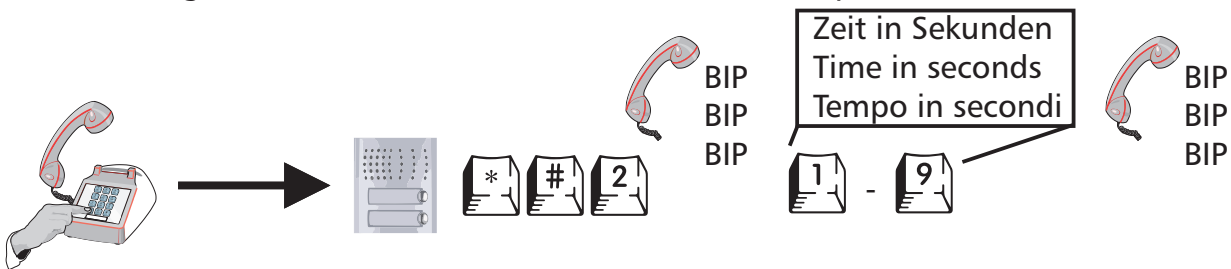

Bedienungsanleitung/user guide/guida all'uso

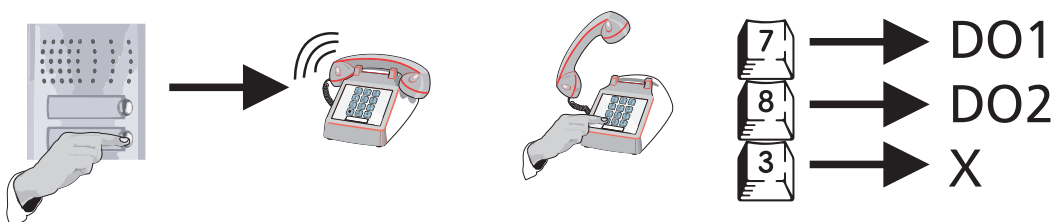

Quickmarks. Download reader for mobile phone: <http://www.quickmark.com.tw/En/basic/download.asp>



Bedienungsanleitung
Doormaster 4 3.00
komplett, deutsch