











- D** FireCom Light Kurzbedienungsanleitung
- GB** FireCom Light quick guide
- I** FireCom Light guida rapida

Systemverkabelung/System cabling/cablaggio sistema


Maschinenraum
Machine room
Sala macchine

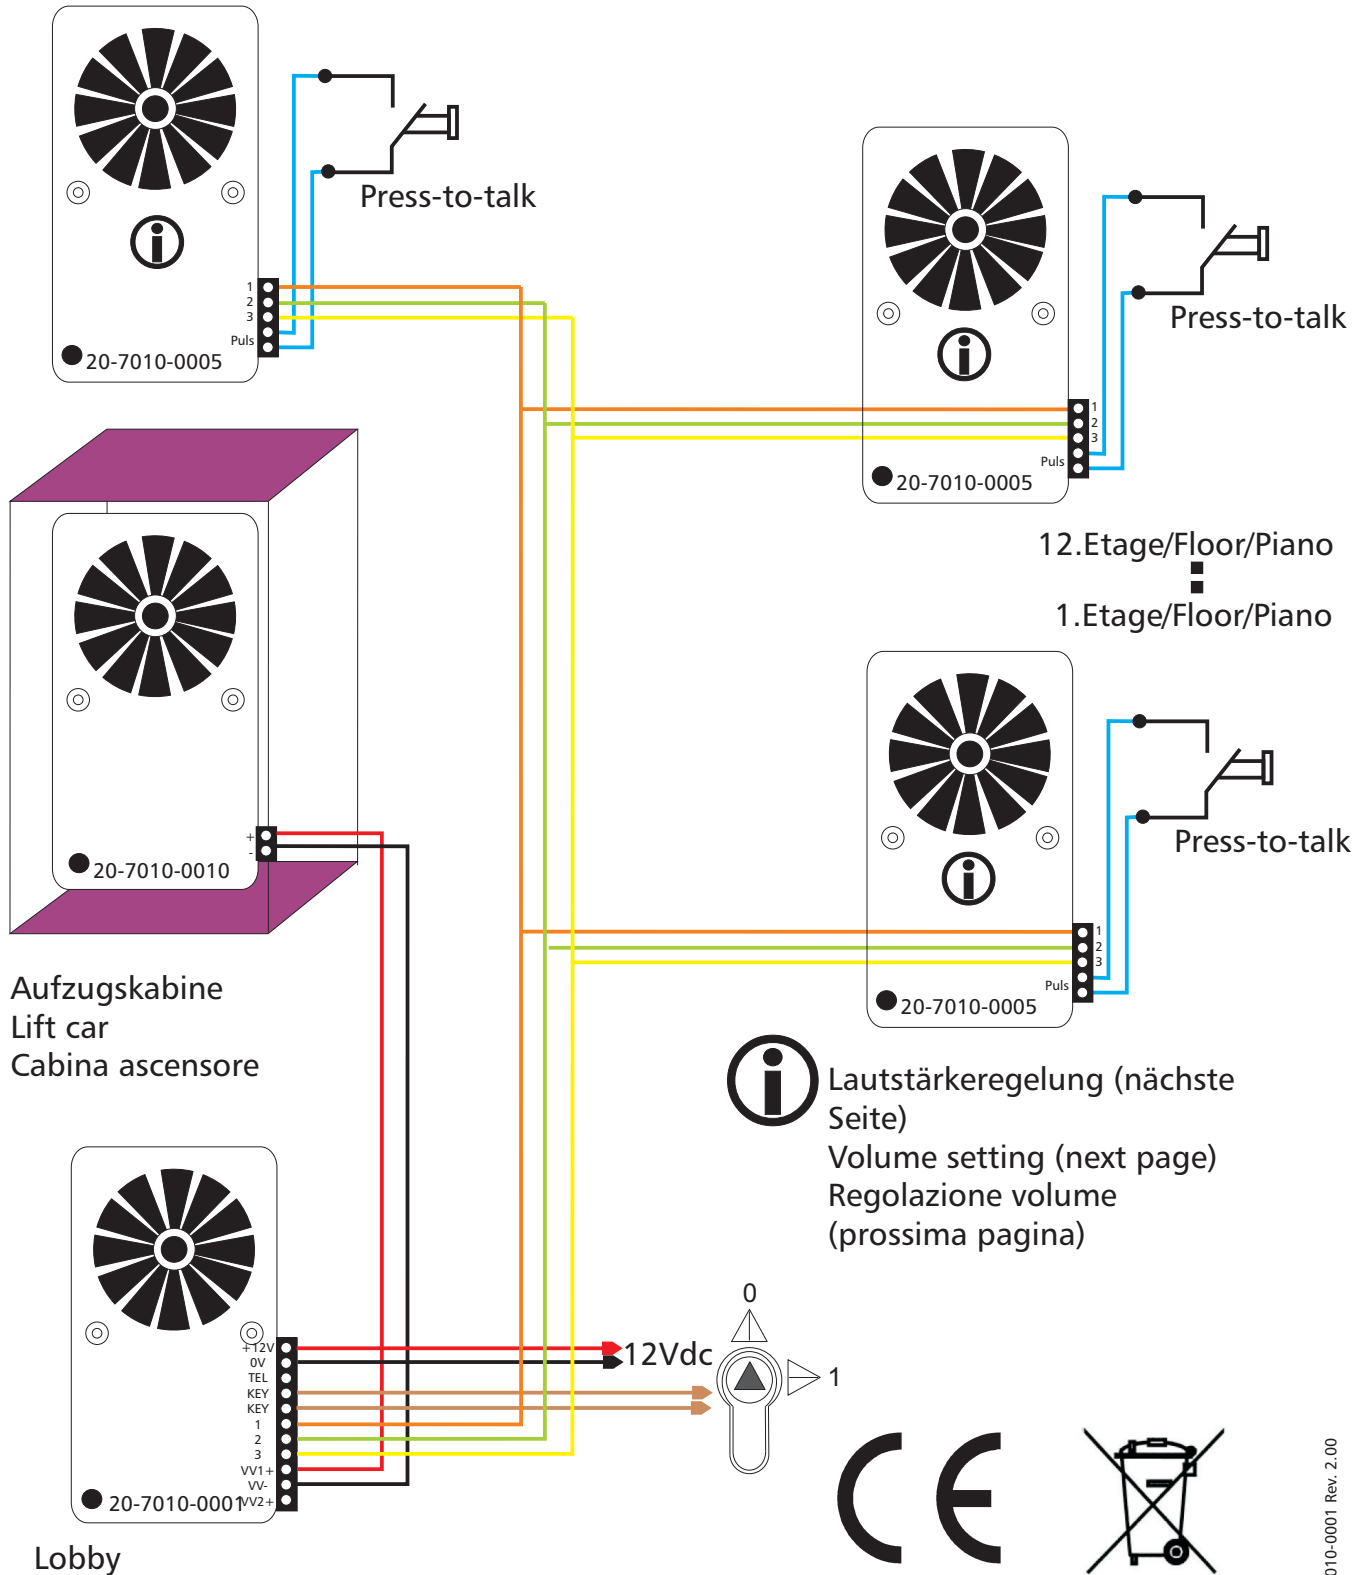

i Lautstärkeregelung und Leitungsabschluss (nur für Maschinenraum/Etage Sprechstellen)
 Volume setting and line termination (only for machine room/floor speaker phones)
 Regolazione volume e terminazione linea (solo per parlatore sala macchine/piano)

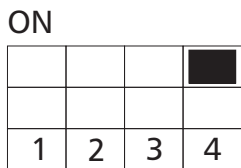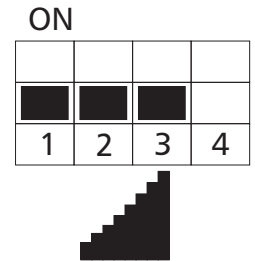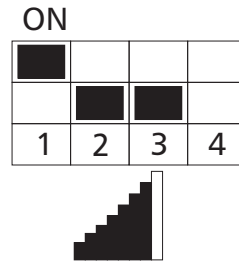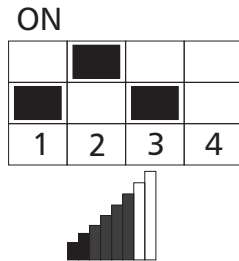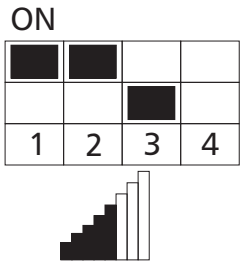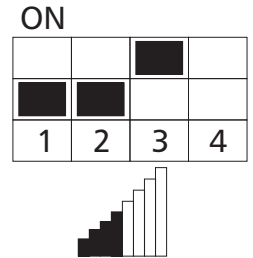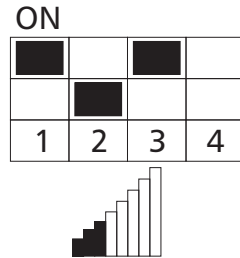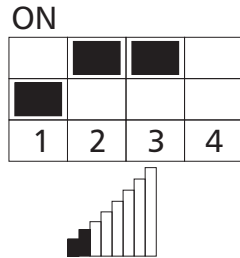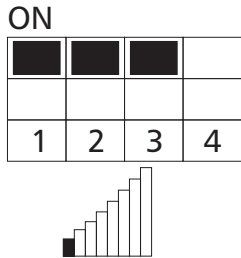

Letzte Sprechstelle
 Last device
 Ultimo terminale

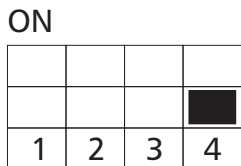

Alle andern Sprechstellen
 All other devices
 Tutti gli altri terminali

